

How to Clean or Replace Your Bottle Docker[®] Clip

Please read all instructions before cleaning or replacing your Bottle Docker[®] clip.

The Bottle Docker[®] uses a hinge to raise and lower the bottle clip. While gardening, walking the beach, or through general use, the hinge of your Bottle Docker[®] may become stiff to operate or “squeak” due to dirt or debris. To clean or replace your Bottle Docker[®] clip, follow these simple steps:

1. Note how the Bottle Docker[®] is assembled.

2. Open the Bottle Docker[®] to 90 degrees.

3. Twist the bottle clip in a counter clockwise rotation to remove it from the belt-clip base.

4. With your fingers, rub each end of the bottle clip's rotation cylinder or replace with your new clip. Wax paper may also be used but please, no chemicals such as WD-40..etc..

5. Reassemble the Bottle Docker[®]:

a. Place bottle clip flat against the belt-clip base with cylinder rotation stop facing up.

b. With both hands, push the bottle clip downward until it snaps into its retention clips. You may also turn the Bottle Docker[®] 180 degrees and pull the clip downward or toward the accessory hole.

